



There are two different methods for installing the start up strainer. According to various manufacturers of cone strainers, they can be installed with the cone facing upstream or the cone facing downstream.

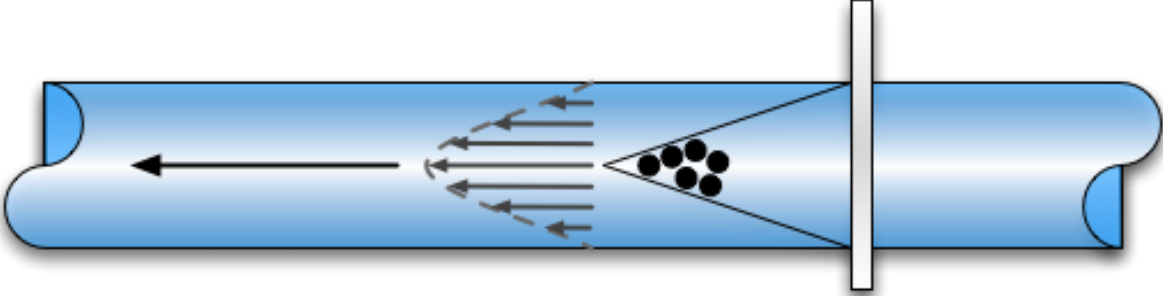

Conical strainer with the tip facing the direction of flow and velocity profile in the pipe

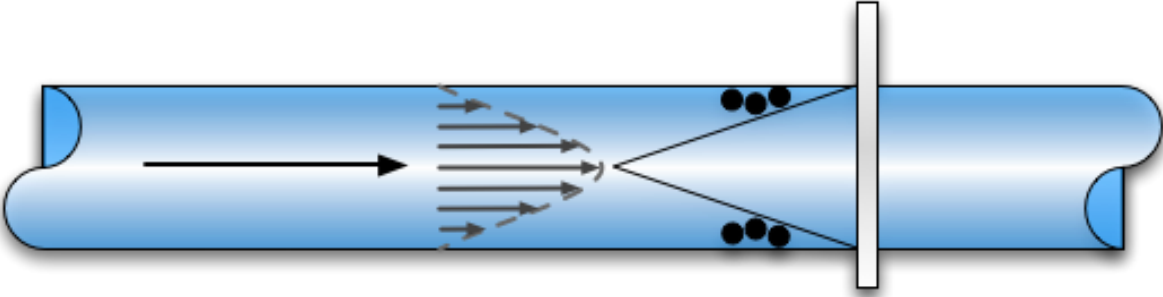

Conical strainer with the tip facing opposite the direction of flow and velocity profile in the pipe